



These are all the pieces that you should receive with your rear view mirror.


1. Mirror
2. Lock Washer
3. 6mm Hex head bolt
4. Riser
5. Rubber cover

**LANCE**  
POWER SPORTS.COM



**LANCE**  
POWER SPORTS.COM

You will notice that there are three wires coming from the mirror. They will be plugged into the corresponding color wires coming from the bike. (Blue to blue, etc.)

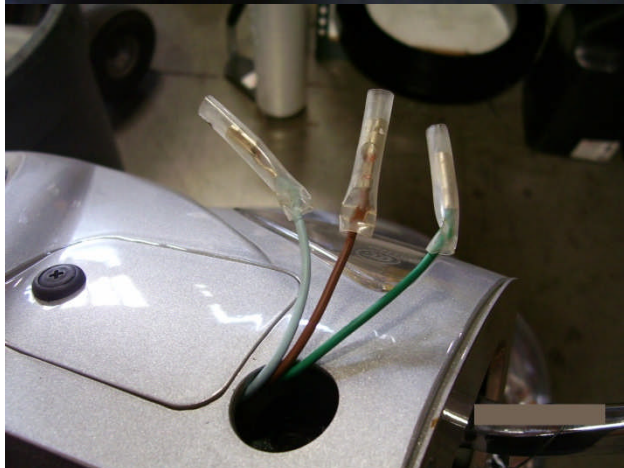

**LANCE**  
POWER SPORTS.COM



Place the **Lock Washer** on the **6mm Hex Head Bolt** and place the bolt through the top of the mirror mount.

Then place the **Riser** on the underside of the mirror mount so that you will not crack the plastic.

**LANCE**  
POWER SPORTS.COM



Tuck in the wires and **make sure that they will not be pinched by the bolt.**

Tighten the bolt with a 6mm Allen Wrench. Make sure that the mirror is sitting correctly so that you can see behind you through the mirrors.

**LANCE**  
POWER SPORTS.COM



Place the **Rubber Cover** over the bolt to give the bike a cleaner look.

**LANCE**  
POWER SPORTS.COM